## ATEX Product Range ATEX II3GD

Safety solenoid valves, one-level

MV ... X, MVD ... X

Differential pressure switch GGW...A4/2 X GGW...A4-U/2 X

High-pressure switch GW...A4/2 HP X







#### ATEX

The abbreviation **ATEX** stands for the French term "Atmosphère explosible" and is used as synonym for the two EU directives concerning explosion protection:

Equipment directive 94/9/EC Workplace directive 1999/92/EC

#### **ATEX product range**

The equipment of the DUNGS ATEX product range complies with equipment group II, category 3 for gas and dust. It may only be used in zones 2 and 22.

#### Approvals/declaration of conformity

DUNGS issues a manufacturer's declaration of conformity for all equipment of the ATEX product range.

The used equipment has an EC type-examination certificate according to the EC gas appliance directive and EC pressure equipment directive based on the corresponding harmonised EN standards.

DUNGS ATEX product range						
Products	Page	for use in				
		Category: II3G Zone 2, gas	Category: II3D Zone 22, dust			
Single solenoid valve, one stage operation MV X, MVD X	4		/			
<b>Differential pressure switch</b> GGWA4/2 X, GGWA4-U/2 X	8	1				
High-pressure switch GWA4/2 HP X	8	1				
Valve proving system VPM-VC, DSLC pxVx 24 V DC (if installed outside of the explosive atmosphere)		•	/			



ATEX Equipment directive 94/9/EC Directive 94/9/EC concerning equipment and protective systems intended for use in potentially explosive atmospheres. It determines rules for placing products, which are intended for use in potentially explosive atmospheres, on the market. For the first time, non-electrical equipment is covered by this directive. Turning couplings, for example, can create a risk of ignition due to inadmissibly high warming.

Annex II of this directive contains the general requirements concerning health and safety protection to be observed by the manufacturer and to be proven by means of the corresponding conformity assessment procedures. **ATEX Workplace directive 1999/92/EC** Determination of minimum requirements for improving the safety and health protection of workers potentially at risk from explosive atmospheres. This directive contains basic safety requirements that must be implemented by the operator/employer. These include:

- Primary explosion protection Prevention or limitation of the formation of explosive atmospheres
- Secondary or constructive explosion protection Avoidance of effective ignition sources
- Tertiary explosion protection Mitigation of the detrimental effects of an explosion to a harmless degree

The purpose of this directive is the protection of persons working in potentially explosive atmospheres. **Explosion protection document** The employer/operator shall create an **explosion protection document** within his **risk assessment** and divide areas with hazardous, potentially explosive atmosphere into **zones**. He shall create an **Ex zone plan** representing the extension of each individual zone and, if necessary, the overall dimensions.

## The explosion protection document shall demonstrate in particular:

- that the explosion risks have been determined and assessed
- a list of measures taken in order to prevent explosions
- the division of areas with potentially explosive atmospheres into zones (Ex zone plane)
- compliance with minimum requirements


The form of the explosion protection document is not prescribed. All relevant documentation that might be useful for evaluating an explosion hazard may be added to the explosion protection document:

Registers of hazardous substances, user manuals of the used equipment according to ATEX Equipment directive 94/9/EC, operating instructions, organisational measures, risk assessments, alarm and risk prevention plan.

#### The operator is solely responsible for the safety of his installation:

- Creation of the installation-specific explosion protection document
- Determination of the zones
- Use of equipment conform to a certain zone
- Proper installation
- Examination prior to putting into service
- Regular check and maintenance of the installation in order to maintain the proper condition of the overall installation.

Definition of ATEX ter	rms							
Equipment	'Equipment' means machines, apparatus, fixed or mobile devices, control components and instrumentation thereof and detection or prevention systems which, separately or jointly, are intended for the generation, transfer, storage, measurement, control and conversion of energy for the processing of material and which are capable of causing an explosion through their own potential sources of ignition.							
Components	'Components' means any item systems but with no autonomo		e safe function	ing of equipmer	nt and protective			
Equipment groups	Equipment grou	pl	E	quipment grou	up II			
	Equipment intended for use in and underground parts	mines, surface	Equipment ir	itended for use i	in other places			
Categories	Category 1	Categ	ory 2	Cate	gory 3			
	Very high level of protection	High level of	protection	of protec	site level tion during operation			
Explosive	Gases, vapours, m	nists		Dusts				
atmosphere	G			D				
Explosion groups	Gases and vapours are classif Their hazardous nature increa The higher explosion group, e	ises from explos	sion group IIA	to IIC.	cial flammability.			
	IIA	IIE	3	I	IC			
Temperature classes	The admissible surface tempera gases and vapours can be class The following max. allowable su classes. A higher temperature cla	sified in these ter rface temperatur	mperature clas es of the equip	ses based on the ment are valid for	eir ignition points. r the temperature			
	T1 ≤ 450 °C T2 ≤ 300 °C	T3 ≤ 200 °C	T4 ≤ 135 °C	T5 ≤ 100 °C	T6 ≤ 85 °C			
Division into zones	The operator/employer shall of the company, into zones with e tion document. The zones are atmospheres.	explosion hazar	d and docume	ent them in the e	xplosion protec-			
Gases	Zone 0	Zon	e 1	Zone 2				
Vapours Mists	Zone 0 is a place in which an explosive atmosphere con- sisting of a mixture with air of flammable substances in the form of gas, vapour or mist is present continuously or for long periods or frequently.Zone 1 is a place in which an explosive atmosphere consisting of a mixture with air or flammable substances in the form of gas, vapour or mist is likely to occur in nor- mal operation occasionally.Zone 2 is a place in which explosive atmosphere con sisting of a mixture with air or flammable substances in the form of gas, vapour or mist is likely to occur in nor- mal operation occasionally.							
Dusts	Zone 20 Zone 21 Zone 22							
	Zone 20 is a place in which an explosive atmosphere in the form of a cloud of com- bustible dust in air is present continuously, or for long peri- ods or frequently.	a cloud of combustible dust in air is present tinuously, or for long peri-						

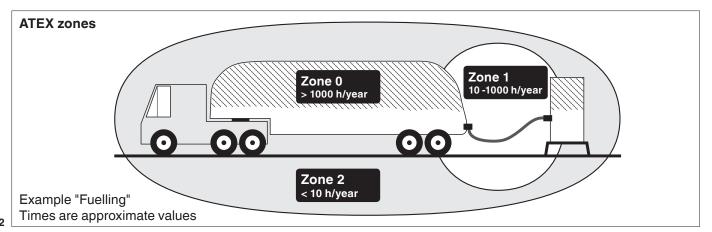



Safety solenoid valves, one stage operation

#### **ATEX II3GD**

MV ... X MVD ... X

#### Technology

Solenoid valves for ATEX requirements II3GD.

Automatic shut-off valve acc. to EN 161 for gas burners and gas burning installations:

- Max. operating pressure up to 200 or 500 mbar
- without current closed
- fast opening
- main flow adjustable
- DC solenoid, rectifier wiring in connector box with **connecting cable 5 m**
- Pipe thread as per ISO 7/1
- Flange connection acc. to DIN 2633, ISO 7005
- reliably operating, robust and maintenance-free

#### Media/use MV ...X MVD ... X

Suitable for gases of gas families 1, 2 and 3 and other neutral gases as well as air, smoke and exhaust gases. Version without non-ferrous material (S02) suitable for gases up to max. 0.1 vol. % H<sub>2</sub>S, dry.

## Approvals

#### ATEX

Manufacturer's declaration according to ATEX directive 94/9/EC: II3GD

EC type-examination certificate according to the EC gas appliance directive: CE-0085 AO 3219

EC type-examination certificate according to the EC pressure equipment directive: CE0036

#### Function

The safety solenoid valve by DUNGS is an automatic shut-off valve activated by auxiliary power.

The electromagnetic drive opens against the closing spring. The armature stroke can be limited by means of an adjustment screw (D function).

If the auxiliary power (operating voltage) is interrupted, the closing spring closes the valve within 1 s.

**MV** ... X: solenoid valve, one stage operation, closed without current, fast opening, fast closing.


**MVD** ... X: solenoid valve, one stage operation, closed without current, fast opening, fast closing.

The gas flow can be limited manually by means of the main flow setting.

#### Attention!

Read the operating and mounting instructions before putting the device into service.

Technical data	MV X, MVD X						
ATEX solenoid valves	Safety solenoid valves, one stage operation						
ATEX	II3GD						
ATEX group	II						
ATEX category	3						
Atmosphere	Gas (G) and dust (D)						
Temperature class	ТЗ						
Nominal diameter, DN Pipe thread acc. to DIN 2999, Rp Flanges	$\begin{array}{cccccccccccccccccccccccccccccccccccc$						
Max. operating pressure	Up to 200 mbar (20 kPa): MV 2; MVD 2 Up to 500 mbar (50 kPa): MV 5; MVD 5						
Solenoid valve	Valve acc. to EN 161, class A, group 2, one stage operation						
Closing time	<1s						
Opening time	< 1 s at an ambient temperature of +20 °C						
Main flow setting	Manually for MVD X						
Material of the gas-bearing parts	Standard versions Housing: Aluminium, steel, brass Seals: NBR Versions without non-ferrous material Housing: Aluminium, steel Seals: NBR						
Voltage / frequency	~(AC) 230 V (+10 % -15 %); 50-60 Hz - other voltages on request						
Power / current consumption	See type overview						
Duty cycle	Continuous duty						
International protection	IP 54 as per IEC 529 (EN 60529)						
Electrical connection	Connecting cable 5 m						
Duty classification	MV X, MVD X Rp 3/8 - Rp 2: max. 100/h						
	MV X DN 40 - DN 100: max. 100/h   MV X DN 125 - DN 150: max. 20/h   MVD X DN 40 - DN 80: max. 100/h						
	MVD X DN 100 - DN 150: max. 20/h						
Sample and start gas connection	G ¼ DIN ISO 228 on both sides in the supply pressure area, additionally on the input side G ¾, as of DN 40 (flange)						
Dirt trap	Integrated sieve, mesh size 1 mm						
Temperature range	Ambient temperature:-15 °C to +60 °CMedium temperature:-15 °C to +60 °CStorage temperature:-30 °C to +80 °C						
Mounting position	Solenoid standing vertically to lying horizontally						
Limit switch	Mounting not permitted!						
Valve check system	DSLC pxVx (installation outside of Ex zone)						

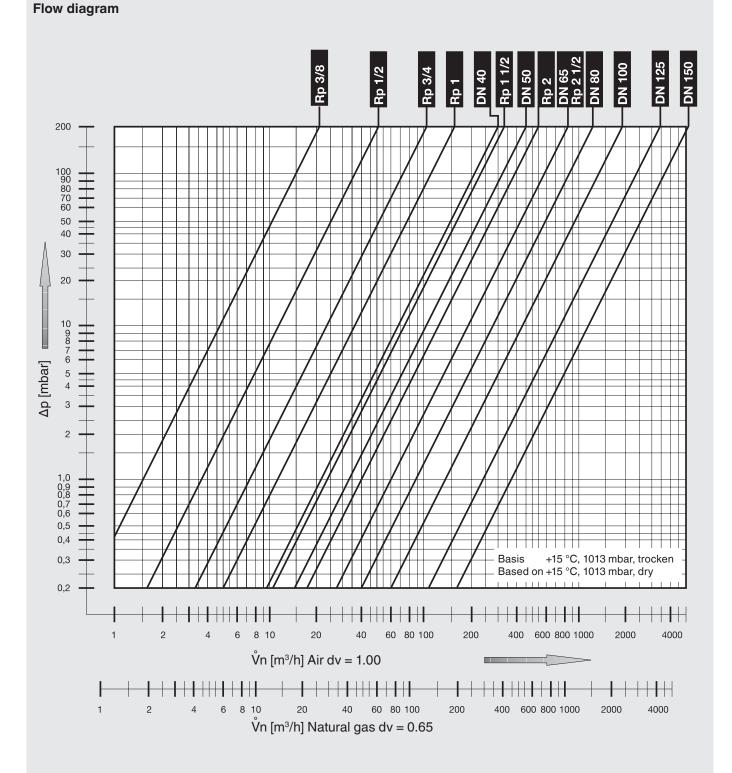


$$\mathring{V}_{gasused} = \mathring{V}_{air} \mathbf{x} \mathbf{f}$$

Dichte Luft Spec. weight air

Dichte des verwendeten Gases Spec. weight of gas used

f =

Gasart Type of gas	Dichte Spec. Wgt. [kg/m³]	dv	f
Erdgas Natural gas	0.81	0.65	1.24
Stadtgas City gas	0.58	0.47	1.46
Flüssiggas LPG	2.08	1.67	0.77
Luft Air	1.24	1.00	1.00

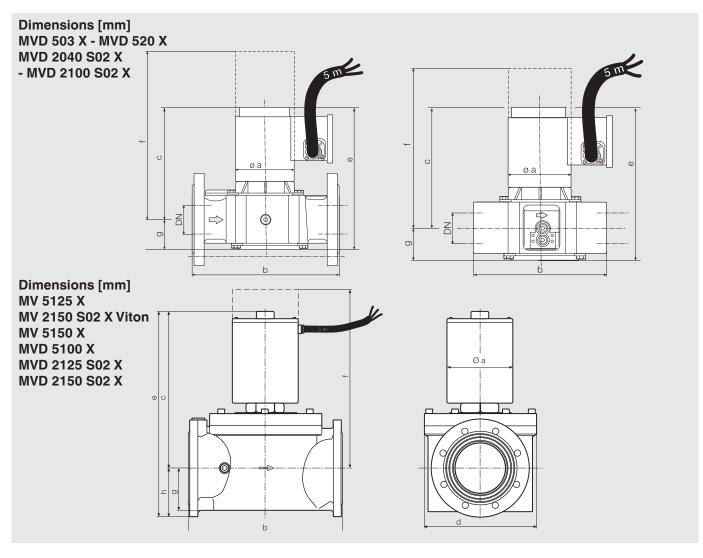

Туре							e	Dimensions [mm]								
ATEX Solenoid valves II3GD	p <sub>max.</sub> [mbar]	DN / Rp	Solenoid number	Order number	P <sub>max.</sub> [VA]	I <sub>max.</sub> [VA] ∼(AC)230 V	Opening time	øa	b	с	d	e	f	g	h	Weight [kg]
MVD 503 X	500	Rp 3⁄8	100X	253011	17	0.08	<1s	50	60	90	75	113	190	20		1.6
MVD 505 X	500	Rp 1⁄2	100X	253012	17	0.08	<1s	50	75	90	75	113	200	23		1.7
MVD 507 S02 X	500	Rp 3⁄4	200X	253013	30	0.15	<1s	75	100	135	80	160	190	25		2.4
MVD 510 X	500	Rp 1	200X	253014	30	0.15	<1s	75	110	135	90	165	190	30		3.3
MVD 515 X	500	Rp 11/2	300X	253015	65	0.30	<1s	95	150	175	116	210	255	35		5.3
MVD 520 X	500	Rp 2	400X	253016	100	0.48	<1s	115	170	190	130	235	300	45		9.5
MVD 2040 S02 X	200	DN 40	300X	253017	65	0.30	<1s	95	200	170	150	230	255	40		6.2
MVD 2050 S02 X	200	DN 50	300X	253018	65	0.30	<1s	95	230	170	165	230	255	45		8.4
MVD 2065 S02 X	200	DN 65	400X	253019	100	0.48	<1s	115	290	215	185	275	320	55		13.4
MVD 2080 S02 X	200	DN 80	500X	253020	80	0.42	<1s	130	310	250	200	305	360	70		18.7
MVD 2100 S02 X	200	DN 100	550X	253021	100	0.48	<1s	150	350	310	240	395	480	85	100	30.8
MVD 2125 S02 X	200	DN 125	61EX	253022	90*	10**	<1s	170	400	406	290	531	514	112	125	54.5
MVD 2150 S02 X	200	DN 150	61EX	253023	90*	10**	<1s	170	480	439	290	582	547	125	143	62.7
MVD 5100 S02 X	500	DN 100	61EX	253031	90*	10**	<1s	170	350	360	240	418	600	85	100	39.7
MV 5125 X	500	DN 125	61EX	253032	90*	10**	<1s	170	400	406	290	531	514	112	125	53.1
MV 5150 X	500	DN 150	61EX	253033	90*	10**	<1s	170	480	439	290	582	547	125	143	62.1
*Electrical power when open** Switch-on current for approx. 3 sf = Space required for mounting the solenoidd = Max. width																



#### Technology

Adjustable pressure switches for ATEX requirements II3GD.

The pressure switches are suitable for activating, deactivating or switching a circuit if the actual value of the pressure changes compared to the set nominal value.

The nominal value (switching point) is set by means of a setting wheel with scale.

#### Media/use GW...A4 HP/2 X GGW...A4/2 X GGW...A4-U/2 X

Suitable for gases of gas families 1, 2 and 3 and other neutral gases as well as air, flue and exhaust gases.

Version without non-ferrous material, suitable for gases up to max. 0.1 vol. % H<sub>2</sub>S, dry.

#### Approvals

ATEX

Manufacturer's declaration according to ATEX directive 94/9/EC: II3GD

EC type-examination certificate according to the EC gas appliance directive: CE-0085 AO 3220


EC type-examination certificate according to the EC pressure equipment directive: CE0036

#### Attention!

Read the operating and mounting instructions before putting the device into service.

#### **Switching function**

With increasing pressure: 1 NC opens, 2 NO closes. With decreasing pressure: 1 NC closes, 2 NO opens.

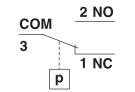

High-pressure switch for gas, air, flue and exhaust gases

ATEX II3GD Ex nC IIB T 75 °C - 15 °C ≤ Ta ≤ 70 °C

GW...A4/2 HP X

#### Function Overpressure switch

#### GW...A4 HP/2 X Pressure switch in overpressure range

The pressure acts on the micro switch via the metal bellows against the force of the adjusting spring. The pressure switch works without auxiliary power.

#### Only GW...A4 HP/2 X

All gas-bearing parts are made of stainless steel 1.4541 and are suitable for:

- Biogas applications
- Aggressive media such as sulfuric acid with concentrations up to 1.0 vol. %

Differential pressure switch for gas, air, flue and exhaust gases

ATEX II3GD Ex nC IIB T 75 °C - 15 °C  $\leq$  Ta  $\leq$  70 °C

GGW...A4/2 X GGW...A4-U/2 X

Differential pressure switch function

GGW...A4/2 X and GGW...A4-U/2 X Differential pressure switch in overpressure and negative pressure range.

The differential pressure acts on the micro switch via the membrane against the force of the adjusting spring. The pressure switch works without auxiliary power.

#### Device selection GGW...A4/2 X and GGW...A4-U/2 X

If the lower pressure  $p_2$  (upper chamber) is a positive pressure compared to the atmosphere, type GGW...A4/2 X must be used.

If the lower pressure  $p_2$  (upper chamber) is a negative pressure compared to the atmosphere, type GGW...A4-U/2 X must be used.

### Overpressure switch GGW...A4/2 X

#### Pressure connection G 1/4


The control unit reacts on overpressure, which connects, disconnects or switches a circuit when exceeding or falling below a set nominal value. Simply acting pressure switch in overpressure range. The G  $\frac{1}{8}$  pressure connection must not be closed.

# Minimum pressure switch GGW...A4-U/2 X

**Pressure connection G** 1/8 The control unit reacts on negative pressure, which connects, disconnects or switches a circuit when exceeding or falling below a set nominal value.

Simply acting pressure switch in negative pressure range. The G1/4 pressure connection must not be closed.

Technical data ATEX pressure switch	GWA4/2 HP X Overpressure switch	1	GGWA4/2 X GGWA4-U/2 X Differential pressure switch						
ATEX		II3G	iD						
ATEX group									
ATEX category		3							
Atmosphere		Gas (G) and dust (D)							
Explosionsgruppe Grenzspaltweite		IIE	}						
Max. surface temperature		+75	°C						
Max. operating pressure		$ \begin{array}{l} GW  500 \; A4 \; HPX \\ p_{max} = 2 \; bar \; (Gas) @ \; Einstellbereich \; 0, \! 1-0, \! 15 \; bar \\ p_{max} = 5 \; bar \; (Gas) @ \; Einstellbereich \; 0, \! 15-0, \! 5 \; bar \\ 500 \; \mathbf{mbar} \; (50 \; kPa) \end{array} $							
	GW 2000 A4 HP X $p_{max} = 5 \text{ bar (Gas)}$ GW 6000 A4 HP X $p_{max} = 8 \text{ bar (Gas)}$		GGW 3 A4-U/2 X up to GGW 150 A4-U/2 X <b>500 mbar</b> (50 kPa)						
Pressure connection	<b>p+</b> : in the centre of the of the housing	<b>p+:</b> in the centre of the underside of the housing <b>p+:</b> in the centre of the underside of the h G ¼-female thread as per ISO 228:G ¼-female thread as per ISO 228:Gas or air							
Temperature range	Ambient temperature Medium temperature Storage temperature	<b>e</b> : -15 °C t	o +70 °C o +70 °C to +80 °C						
Material	Bottom part of the he Aluminium diecast Switch part: Polycarb Metal bellows: 1.4541 Hood Zinc diecast, powder-o Switching contact Standard: AG gilded (# suitable for DDC applie DC 24 V; 0.02 A	oonate 1 (stainless steel) coated Au),	Bottom part of the housing Aluminium diecast Switch part: Polycarbonate Membrane: NBR Hood Zinc diecast, powder-coated Switching contact Standard: Gilded Ag (Au), suitable for DDC applications: DC 24 V; 0.02 A						
Switching voltage	DDC-Anwendung	AC eff. min. 2 DC min. 2 DC min.	24 V max. 48 V						
Rated current	DDC-Anwendung	AC eff. 10 A DC 20 mA							
Switching current	AC eff.min. 20 mAmax. 6 A with cos φ 1AC eff.AC eff.max. 3 A with cos φ 0.6DCmin. 20 mAmax. 1 ADDC-AnwendungDCmin. 5 mAmax. 20 mA								
Electrical connection	on screw-type terminal Line diameter 5 mm - 1		ATEX M20x1.5						
International protection	IP 65 as per IEC 529 (I	EN 60529)							
Adjustment	Optionally increasing of	With increasing pressure in vertical mounting position. Optionally increasing or decreasing setting on site. Observe the change of the switching point with deviating mounting position.							
Adjustment tolerance	±15 % deviation of the switching point compared to the nominal value and installation in vertical mounting position								

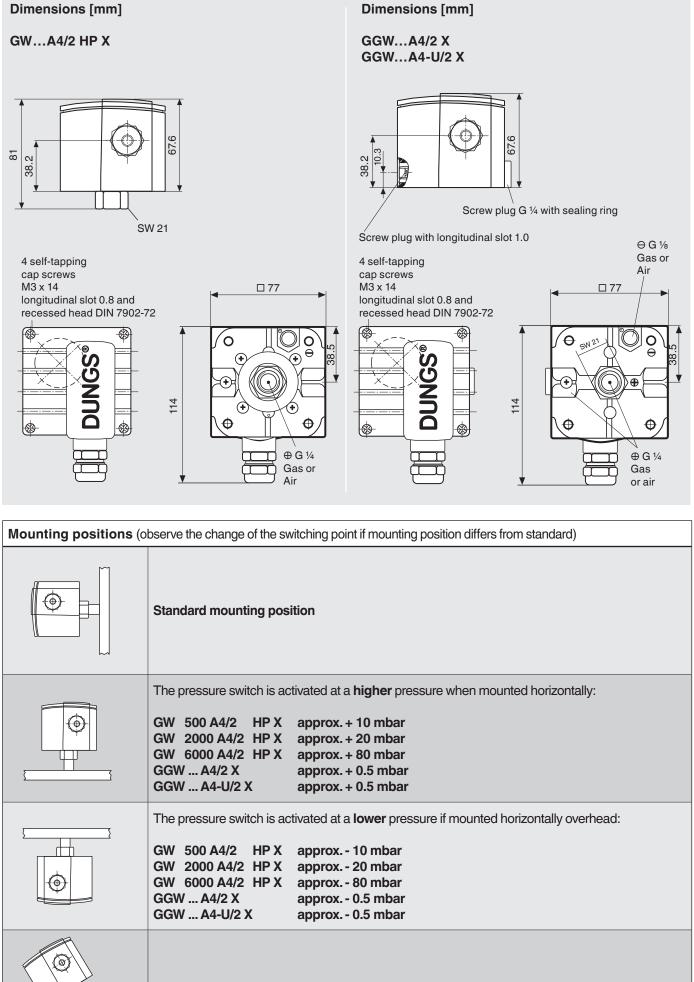

If mounted in intermediate mounting position, the pressure switch is activated at a max. higher or lower pressure compared to the set nominal value.

α

Type ATEX Pressure control device II3GD	Version	p <sub>max.</sub> [mbar]	Order number	Adjustment range [mbar]	Switching difference Δp [mbar]	Inter- national protection
GW A4/2 HP X Pressure	GW 500 A4/2 HP X	2000 @ 100-150 5000 @ 150-500	251984	100 — 500	≤ 30	
control device [-Au-M-V0]	GW 2000 A4/2 HP X	5000	251985	400 - 2000	≤ 50 @ 400-1000 ≤ 100 @ 1000-2000	IP 65
	GW 6000 A4/2 HP X	8000	251986	1000 — 6000	≤ 300	
	1		1		1	
GGW A4/2 X	GGW 3 A4/2 X	500	245810	0.4 - 3.0	≤ 0.3	
Differential pressure switch	GGW 10 A4/2 X		248694	1.0 - 10.0	≤ 0.5	IP 65
(overpressure)	GGW 50 A4/2 X		245811	2.5 - 50	≤ 1	16.02
[Au-M-MS9-V0-VS3]	GGW 150 A4/2 X		248695	30 — 150	≤ 3	
GGW A4-U/2 X	GGW 3 A4-U/2 X		248390	-0.43.0	≤ 0.3	
Differential pressure switch	GGW 10 A4-U/2 X	500	248391	-1.0 — -10.0	≤ 0.5	IP 65
(negative pressure)	GGW 50 A4-U/2 X	500	246180	-2.550	≤ 1	IP 05
[Au-M-MS9-V0-VS3]	GGW 150 A4-U/2 X		248392	-30 — -150	≤ 3	
Accessories						
Gauge connection G 1/	4 with sealing ring (5x)		230398	only for GGW	. A4/2 X, GGW A4-U	/2 X
Mounting kit Mounting	g bracket, metal		230288			


ATEX Product Range ATEX II3GD

Safety solenoid valve, one stage operation MV ... X, MVD ... X Differential pressure switch GGW...A4/2 X GGW...A4-U/2 X High-pressure switch GW...A4/2 HP X



#### **ATEX conformity certificate**

The original can be found under www.dungs.com

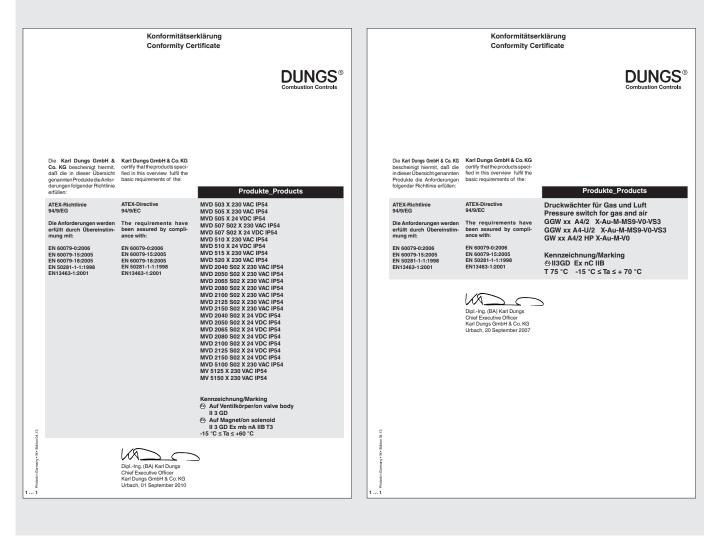

Subject to technical modification in the interest of technical progress.



Company address Karl Dungs GmbH & Co. KG Siemensstraße 6-10 D-73660 Urbach, Germany Phone +49 (0)7181-804-0 Fax +49 (0)7181-804-166 Postal address Karl Dungs GmbH & Co. KG Postfach 12 29 D-73602 Schorndorf, Germany e-mail: info@dungs.com Internet: www.dungs.com